

Z100-Odb Bios v191 upgrade steps

1. Preparation

EFI.zip

AD0J0.191.bin


Fpt_adl_n.efi

2. Disable the ME State

Pressing "delete" key of keyboard while power on Z100-OdB to go to bios settings interface.


Goto "advanced page and click "Ctrl+F1" to show hidden option. Disable the ME State by

path: Advanced->PCH-FM Configuration->ME State->Disable

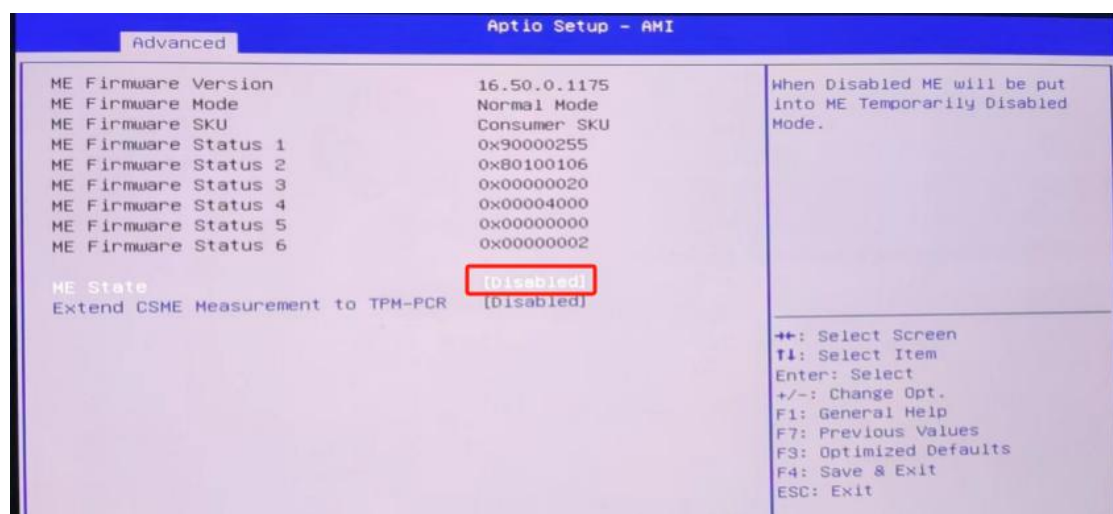

Disable ME State


Pressing F4 and click "Yes" to save the settings and restart.

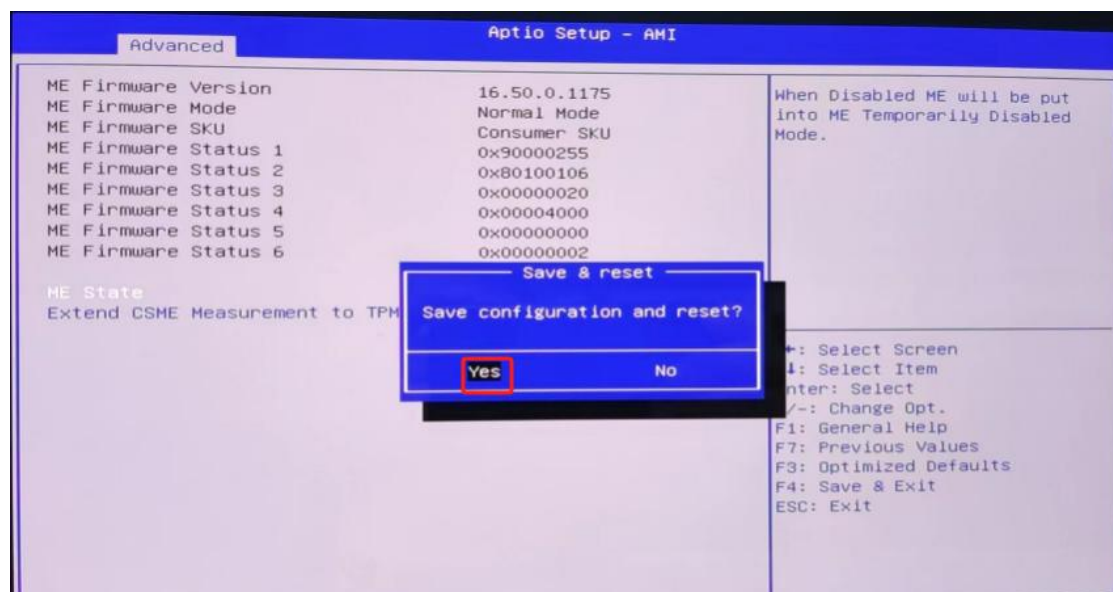

Save Bios settings changing

3. Upgrade Bios


- a. Extract "EFI.zip" to USB disk root directory
- b. Extract "AD0J0.191.rar" and copy all the files in fold "AD0J0.191" to USB disk root directory
- c. Insert USB disk to Z100-0dB. Pressing F11 while power on Z100-0dB, it will go to UEFI mode. Select your usb disk and click "Enter" key of keyboard

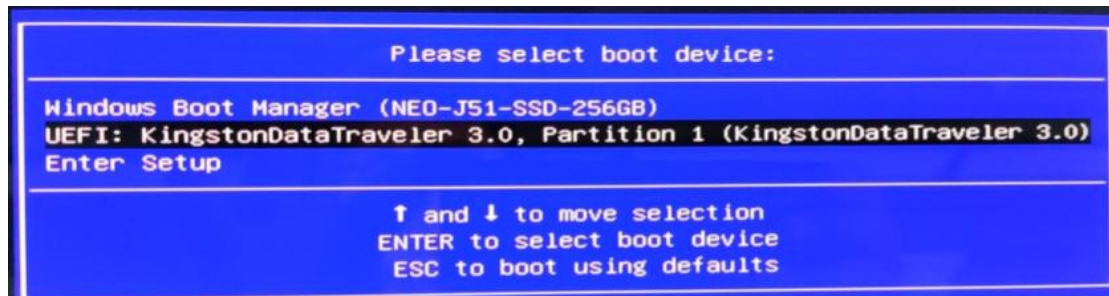

Eg. UEFI is my usb disk

- d. The bios will upgrade automatically (please do not disturb the process and patiently).
4. Upgrading finish

The "Process Completed" means that the upgrade has been successful, and then restart (Ctrl+Alt+Delete) the device you can experience the new functions of bios v191

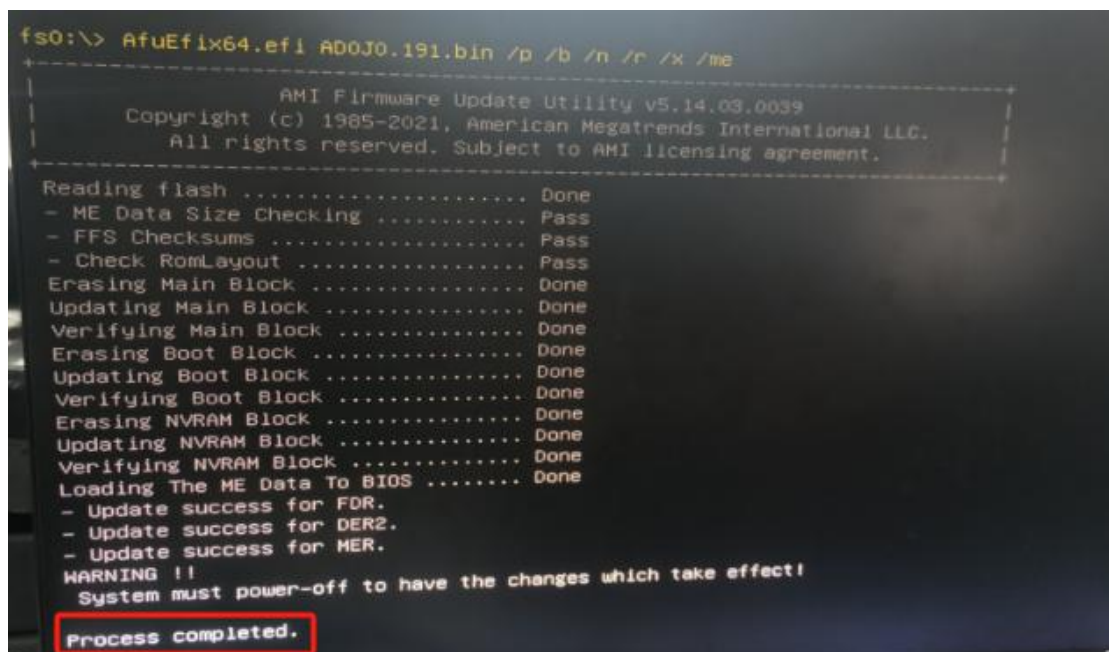

Process completed